Whirlpool Gold® 30" Electric Cooktop

G7CE3055X

Key Features

- Our first ever 30", 5-element cooktop gives you more cooking flexibility and options.
- Eco-Friendly Schott Ceran® Cooktop is easy to clean and won't crack or chip with intense heat.
- The AccuSimmer® element's advanced technology allows for precise temperature control that is perfect for melting chocolate or simmering sauces.
- Keep your electric cooktop looking like new with easy-to-clean, dishwasher-safe knobs.
- 10/6" Dual Radiant Element
- (1) 10", (2) 6" and (1) 6" Warming Zone Element
- A hot surface indicator light illuminates when the cooktop surface is still hot to the touch — even after the heating element has been turned off.
- Can be installed over a single built-in wall oven for added installation flexibility.

Whirlpool Gold® 30" Electric Cooktop

G7CE3055X

Specifications

COOKTOP MATERIAL	
Ceramic Glass	Yes
ELEMENT DETAIL	
Number of Elements	5
Left Front Size (in)	10
Left Front Power (watts)	2500
Right Front Size (in)	10/6
Right Front Power (watts)	2500/1200
Left Rear Size (in)	6
Left Rear Power (watts)	1200
Center Rear Size (in)	6
Center Rear Power (watts)	1200
Right Rear Size (in)	6
Right Rear Power (watts)	100
COOKING SURFACE CONTROLS	
Power On Indicator Light	Yes
Hot Surface Indicator Light(s)	Yes
ELECTRIC COOKTOP FEATURES	
AccuSimmer®	Yes
ELECTRICAL REQUIREMENTS	
Voltage	240
Circuit Amps@240VAC	40
DIMENSIONS	
Overall Height	3 ¾
Overall Width	30 13/16
Overall Depth	21 ¾
Cutout Width	29 ½
Cutout Depth	20 ½
	All dimensions are shown in inches.
COLOR AVAILABILITY	**B, S**

*B-Black and S-Stainless Steel

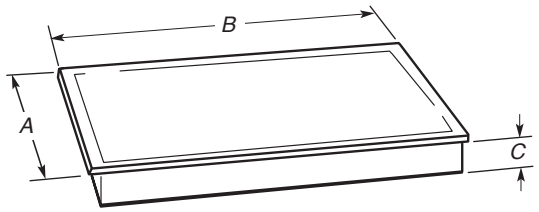

A. 21¾" (55.2 cm)
B. 30" (76.2 cm) models - 30 13/16" (78.4 cm)
36" (91.4 cm) models - 36 5/16" (92.3 cm)
C. 3¾" (9.5 cm)

Dimensions are for planning purposes only.
For complete details, see Installation Instructions packed with product.
Specifications subject to change without notice.

Dimensions

IMPORTANT: If installing a range hood or microwave hood combination above the cooktop, follow the range hood or microwave hood combination installation instructions for dimensional clearances above the cooktop surface.

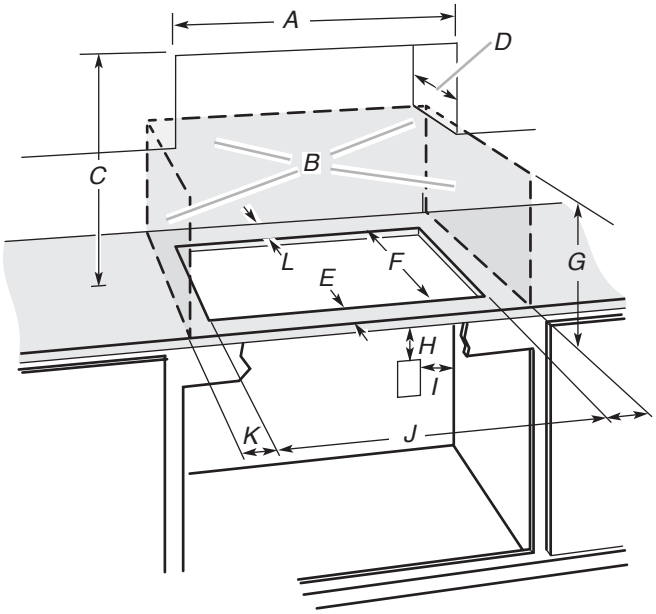

A. 30" (76.2 cm) on 30" models; 36" (91.4 cm) on 36" models
B. Combustible area above countertop (shown by dashed box above)
C. 30" (76.2 cm) minimum clearance between top of cooktop platform and bottom of uncovered wood or metal cabinet (24" [61 cm] minimum clearance if bottom of wood or metal cabinet is covered by not less than ¼" [0.6 cm] flame retardant millboard covered with not less than No. 28 MSG sheet steel, 0.015" [0.04 cm] stainless steel, or 0.024" [0.06 cm] aluminum or 0.020" [0.05 cm] copper)
D. 13" (33 cm) recommended upper cabinet depth
E. 2" (5.1 cm)
F. 20½" +/- 1/16" (52.0 +/- 0.16 cm)
G. 18" (45.7 cm) minimum clearance from upper cabinet to countertop within minimum horizontal clearances to cooktop
H. Junction box or outlet: 7" (17.8 cm) minimum from top of countertop
I. Junction box or outlet: 9" (23.0 cm) maximum from right side of cabinet
J. 29½" +/- 1/16" (74.9 +/- 0.16 cm) on 30" (76.2 cm) models
35½" + 1/16 "/- 15/16" (90.2 cm + 0.16 cm/- 2.38 cm) on 36" (91.4 cm) models
K. 1" (2.5 cm) minimum distance to nearest left and right side combustible surface above cooktop
L. 1" (2.5 cm) minimum clearance between back wall and countertop

NOTES: After making the countertop cutout, some installations may require notching down the base cabinet side walls to clear the cooktop base. To avoid this modification, use a base cabinet with sidewalls wider than the cutout.

If cabinet has a drawer, a 5½" (14.0 cm) depth clearance from the top of the countertop to the top of the drawer (or other obstruction) in base cabinet is required.

®Registered trademark/™ Trademark of Whirlpool, U.S.A. ©2010. All rights reserved.